



Casio Exilim EX-Z70 LCD Screen Replacement

This guide will go through the necessary steps needed to replace the LCD screen of the device in the case that it has cracked or stopped functioning.

Written By: Jenn Eberts



TOOLS:

- [54 Bit Driver Kit](#) (1)



Step 1 — LCD Screen



- Open the battery door by sliding it toward the LCD screen.
- This will reveal a small screw to the left of the memory card slot.
- Carefully remove the screw (1.77mm).
- The bottom panel of the camera will become loose. It is connected to the camera by two wires so do not remove completely.




Step 2

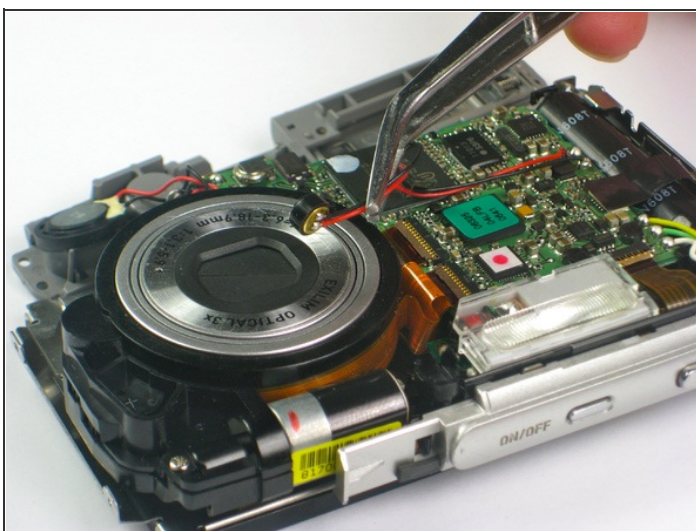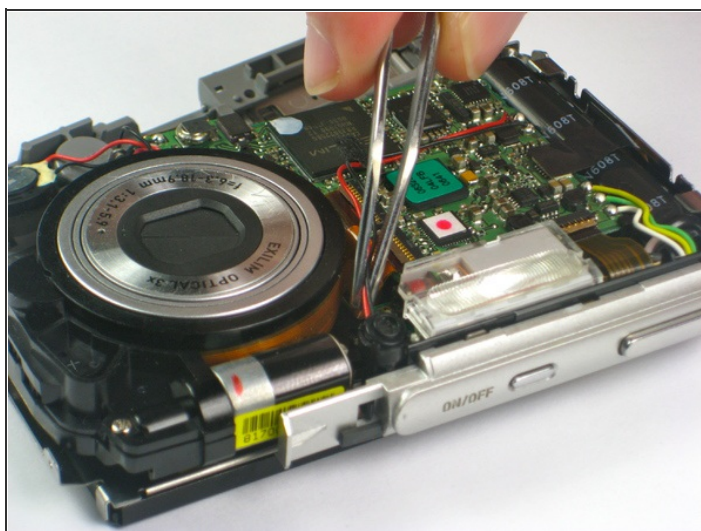

- We have oriented the camera with the lens up and the flash toward you for clear visibility.
- Use a pair of tweezers to gently move the red and black wires away from the lens.



Step 3

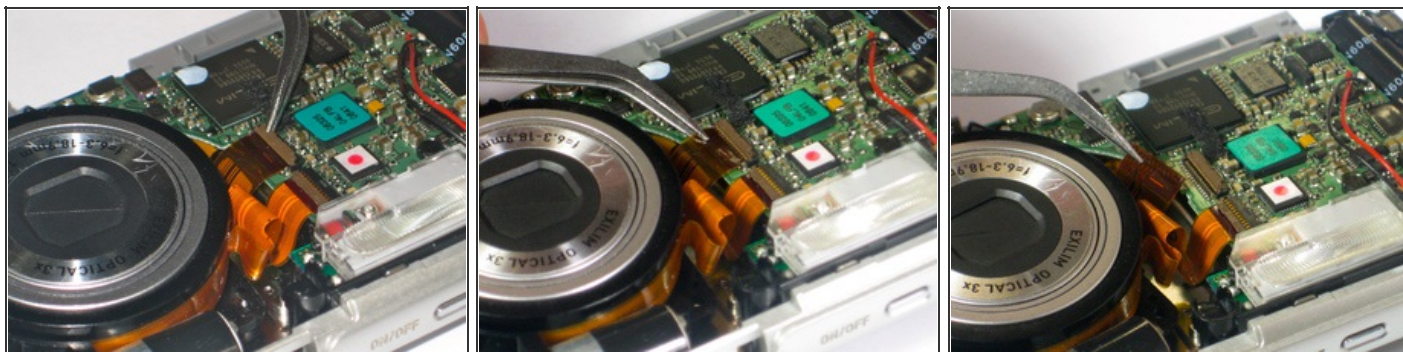

- Using tweezers or finger nails to pull up the brown flaps where the three orange film strips meet the circuit board.
- Use tweezers to pull the orange film strips out of each port. Be sure to do this to all three orange strips. They should come out easily.

Step 4



- Pull the circuit board away from the camera.
- Be careful the circuit board is still attached to the camera by a black film strip.



Step 5



- Gently pull off the plastic cover over the LCD screen

Step 6



- Gently pull the LCD screen away from the camera. Be careful since the screen is still attached to the camera circuit board.
- You have now completed the guide to remove the the LCD screen.

<p>To reassemble your device, follow these instructions in reverse order.</p>

This document was last generated on 2014-12-19 01:42:24 AM.